

REQUIRED SOFTWARE – SSH/TELNET CLIENT


Steps provided using PuTTY, download on laptop/
tablet: <http://www.putty.org/>

Configure via Console Cable

CONNECTING THE READER FOR CONFIGURATION

You will need the following devices and cables:


1. Impinj Reader
2. Ethernet cable
3. USB-C to RJ45 console cable -or- 4. USB to RJ45 console cable
5. PoE Switch/PoE network drop
6. Laptop/tablet with USB-C or USB port

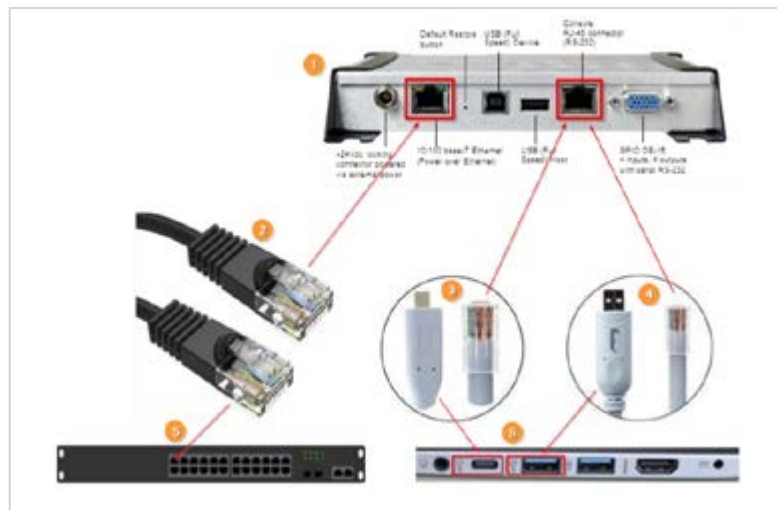

STEPS FOR CONFIGURING THE READER


- 1 Connect the RFID reader like the above diagram and open PuTTY
- 2 In “PuTTY Configuration” screen set the following
 - 2a Choose “Serial” for Connection type
 - 2b In “Serial line” field, enter the COM port the console cable is connected to:

Reference: [Locating the COM Port Number - Windows](#)
 - 2c In “Speed” field, enter 115200
- 3 Click “Open” button.

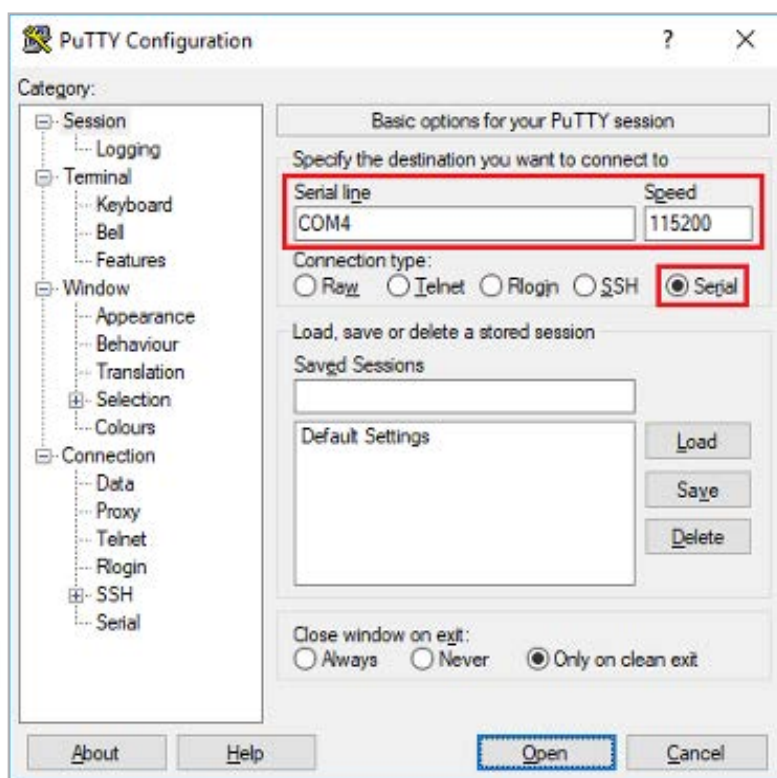

- 4 You will get a RShell login prompt. If you see a blank screen, hit the “Enter” key once.
- 5 Type the default login and password information:

Login: *root*
Password: *impinj* (the password characters may not show as you type them)
- 6 You are now logged into the reader’s RShell interface.

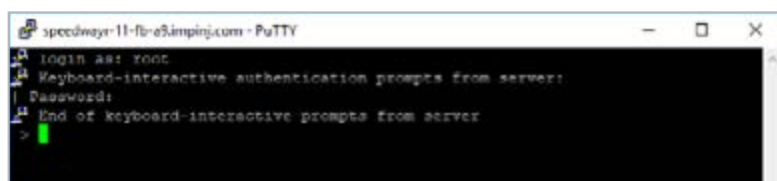

- 7 To find out the RFID reader's IP address, type the following at the RShell prompt:

> show network summary

- 8 To set the RFID reader to a static IP address you are configuring the *IP address*, *Netmask*, *Gateway*, and *Broadcast Address* separated by a space character:

```
> config network ip static xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx
```

IP Address
Netmask
Gateway
Broadcast

For Example:

```
> config network ip static 192.168.0.20 255.255.255.0 192.168.0.1 192.168.0.255
```

- 9 To exit from the RShell interface:

> exit

Configure via SSH

STEPS FOR CONFIGURING THE READER


- 1 Open PuTTY or preferred SSH Client

- 2 In "PuTTY Configuration" screen set the following

- 2a Choose "SSH" for Connection type

- 2b In "Host Name (or IP Address)" field input reader IP

- 2c Click "Open"

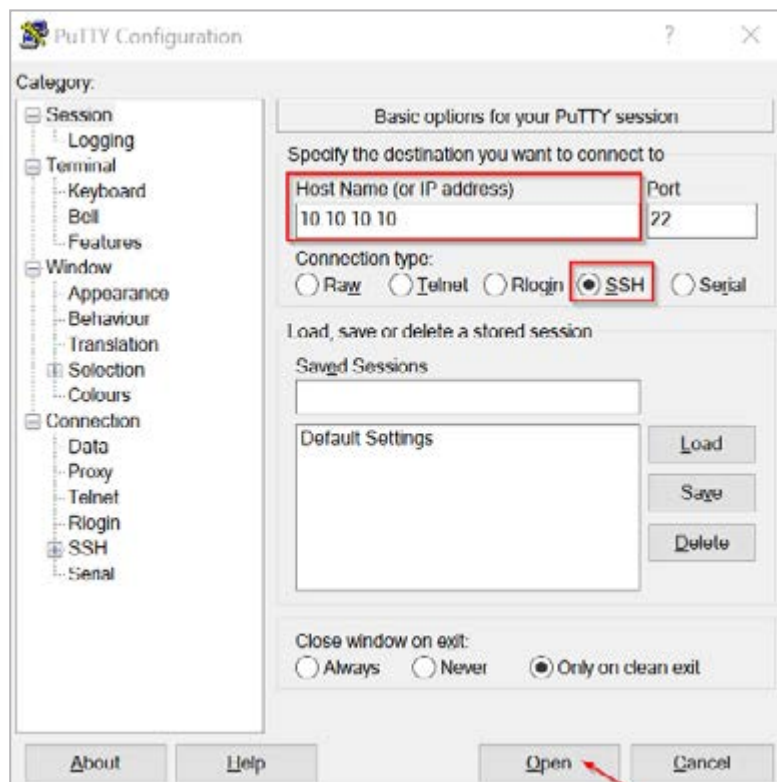

- 3 First time connecting to reader you will receive PuTTY Security Alert, select Yes.

- 4 Log into the reader

Username: *root*

Password: *impinj* (the password characters may not show as you type them)

- 5 At the > prompt type the following command to confirm the reader IP:

> *show network summary*



- 6 To set the RFID reader to a static IP address you are configuring the *IP address*, *Netmask*, *Gateway*, and *Broadcast Address* separated by a space character:

> *config network ip static* xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx xxx.xxx.xxx.xxx

IP Address Netmask Gateway Broadcast

For Example:

> *config network ip static* 192.168.0.20 255.255.255.0 192.168.0.1 192.168.0.255

- 7 To exit from the RShell interface:

> *exit*