

## PROCESS SCOPE

The purpose of this document is to define the procedure for updating the software version on a RFID reader.

## PROCESS STEPS

- 1 Navigate to the reader webpage via preferred browser (i.e. Chrome, Edge, etc)

- 2 Log into reader using default credentials

Username: *root*  
Password: *impinj*

- 3 Current version shows under DETAILS:

### Sign in

http://

Your connection to this site is not private

Username

Password

Sign in

Cancel

### DETAILS

|                   |                               |
|-------------------|-------------------------------|
| Model Name        | Speedway R420                 |
| Regulatory Region | FCC Part 15.247               |
| MAC Address       | 00:16:25:11:47:7B             |
| Software Version  | 6.2.1.240 (Build e06c7d3b556) |
| Hardware Version  | 250-004-000                   |
| Serial Number     | 370-15-09-0094                |

- 4 Under Reader Upgrade:

- 4a Select Browse

### READER UPGRADE

|                       |  |
|-----------------------|--|
| Upgrade Status        | Ready  |
| Last Operation Status | N/A  |
| Select Upgrade File   | <input type="button" value="Browse..."/> No file selected. |
| Upgrade Now           | <input type="button" value="Upgrade [↑]"/>                 |

- 4b Navigate to octane-x.x.x.xxx.upg file and select Open

File name:

- 4c Select Upgrade

### READER UPGRADE

|                       |   |
|-----------------------|---|
| Upgrade Status        | Ready   |
| Last Operation Status | N/A   |
| Select Upgrade File   | <input type="button" value="Browse..."/> octane-6.4.1.240.upg |
| Upgrade Now           | <input type="button" value="Upgrade [↑]"/>                    |

**4d** Last Operation Status will change to Uploading File

## READER UPGRADE

|                       |   |
|-----------------------|---|
| Upgrade Status        | Ready   |
| Last Operation Status | Uploading File  |
| Select Upgrade File   | <input type="button" value="Browse..."/> octane-6.4.1.240.upg |
| Upgrade Now           | <a href="#">Upgrade [↑]</a>                                   |

**4e** Upgrade Status will change to ProcessingImageFile

## READER UPGRADE

|                       |                     |
|-----------------------|---------------------|
| Upgrade Status        | ProcessingImageFile |
| Last Operation Status | N/A                 |
| RefreshTimer (secs)   | 4                   |

**4f** Once software install is complete Upgrade Status changes to Ready and Last Operation Status changes to Waiting for manual reboot

## READER UPGRADE

|                       |  |
|-----------------------|--|
| Upgrade Status        | Ready  |
| Last Operation Status | Waiting for manual reboot                                  |
| Select Upgrade File   | <input type="button" value="Browse..."/> No file selected. |
| Upgrade Now           | <a href="#">Upgrade [↑]</a>                                |

**5** Under Reader Reboot select Reboot

## READER REBOOT

|                 |                        |
|-----------------|------------------------|
| Reboot Status   | Ready To Reboot        |
| Press to Reboot | <a href="#">Reboot</a> |

**6** Popup opens requesting confirmation to Continue, select OK

READER IP says:  
Continue with Reboot

**7** Reader Reboot Status updates

## READER REBOOT

|                     |                       |
|---------------------|-----------------------|
| Reboot Status       | Rebooting in progress |
| RefreshTimer (secs) | 53                    |

**8** Updated Software Version shows under Details

## DETAILS

|                   |                               |
|-------------------|-------------------------------|
| Model Name        | Speedway R420                 |
| Regulatory Region | FCC Part 15.247               |
| MAC Address       | 00:16:25:11:47:7B             |
| Software Version  | 6.4.1.240 (Build 6d422edf3de) |
| Hardware Version  | 250-004-000                   |
| Serial Number     | 370-15-09-0094                |